

Manual for REIZEN Analog Digital Talking Water Resistant Watch

Item 700300 – English
Item 700310 – Spanish

NOTICE:

1. The watch is for daily use. It can absorb splashing, but do not submerge in water.
2. Do not wear in unfavorable environments (ex. extreme hot or cold.)
3. Do not wear in static or high cycle environments.
4. The watch can bear normal use/shaking. Any rough use/impact can cause damage.
5. Do not wear in places having chemicals. The chemical action could damage the sealing ring, watchcase and watch surface.
6. Clean watch surface with soft cloth and clear water. Do not use chemicals.
7. Do not stretch the watch band too tightly around your wrist.
8. Keep the watch in a dry environment when not in use.
9. The coating on the watch may fade or scuff under heavy pressure.
10. If you find white powder on the watchband, wipe it off with a cloth. The resin-made watchband may age, crack, or break when you sweat or it is damp. Wipe the dirt off the watchband with a soft cloth.
11. The watch is made of precision electronic parts. Do not open the cover by yourself. Please ask an approved specialist to disassemble and repair the watch.
12. Keep these instructions nearby for future reference

STANDARD DISPLAY AND BUTTON FUNCTIONS:

Operate and adjust the watch according to the following indications on the screen.
Display symbol/Button Position/Function:

OPERATION:

Adjust LCD analog time

Press B5 {SW} button, using a pen or pencil, to adjust the minute and hour hands to the correct time

Mode Change

Press B1 to change the function according to the following directions:

Normal time	B1	Time setting	B1	Alarm setting
Display mode-----		mode	-----	mode

“Di” “Di Di Di”

B1

To Set Time:

Starting from time display mode, press B1 [MODE] to enter time setting mode. Press B2[MIN], B3[HOUR] to adjust minute and hour respectively to the correct time.

To Set Alarm Time:

Starting from time display mode, press B1[MODE] twice to enter alarm setting mode. AL symbol will display with blinking numerals. Press B2 [MIN], B3 [HOUR] to adjust minute and hour respectively to the appropriate alarm time.

Choose the alarm sound and turn on or off the alarm

In normal time display, press B3 [HR] button to choose the alarm sound and turn on or off the alarm. When setting the alarm sound, it will play the alarm sound and the alarm time is shown on the display, the alarm function is on, after playing the alarm sound, it returns to the normal time display.

When setting without alarm sound, alarm function is off, then it plays “Di”.

Turn on/off hourly announcement

Starting from time display mod, press B2 [MIN] to activate (see symbol) or deactivate hourly announcement (no symbol).

Snooze function

When the alarm sounds, press B4 [TALK] to stop the alarm and start the snooze function. The alarm will sound again every five minutes after the snooze starts. The alarm will sound no more than six times.

Listen to the alarm sound

In normal time display mode, press and hold B4 [TALK] button.

Battery replacement

Replace the batteries when the screen display appears blue, vanishes as the volume fades out or operation malfunctions. The talking movement uses a CR2025 battery; the LCD Analog movement uses a LR1130 battery. Please don't use other types of batteries.

Since all watches in the factory are fitted with a battery for testing, when you buy a watch, it had a period of normal power consumption, so the original battery replacement cycle is likely shorter than normal.

CE

Made In China

90-DAY LIMITED WARRANTY

REIZEN, Inc.

P.O BOX 3312

Farmingdale, NY 11735

www.ReizenUSA.com